

# Remote Controls

Foot, Hand and Fingertip Remote Controls 

## Foot Controls



RFCS-14 HD shown.

**RFCS-14 HD (14-pin plug)\* 194744**  
**RFCS-5 HD (5-pin plug)\*\* 195218**

Heavy-duty foot pedal current and contactor control provides increased stability and durability from larger base and heavier cord. Maximum flexibility is accomplished with a reconfigurable cord that can exit the front, back or either side of the pedal. Includes 20-foot (6 m) cord with plug.

**RFCS-6M (6-pin plug)**  
**195183** 13.25 ft. (4 m) cord  
**195504** 20 ft. (6 m) cord

Same heavy-duty foot pedal as above, but for Maxstar® 161 STL, Maxstar 161 STH, and Multimatic™ 200.



**RFC-23 242199020**  
 For Dialarc® 250 AC/DC. Foot pedal current and contactor control. Includes 20-foot (6 m) cords with plugs.

Note: Adapter no longer available.



**RFCS-RJ45 300432**  
 For Diversion™ 165 and 180. Foot pedal current and contactor control. Includes 14-foot (4.3 m) cord with plug.

## Hand Controls



**RHC-14 (14-pin plug)\***  
**242211020** 20 ft. (6 m) cord  
**242211100** 100 ft. (30.5 m) cord  
 Miniature hand current and contactor control. Dimensions: 4 x 4 x 3.25 inches (102 x 102 x 83 mm). Includes cord with plug.



**RHC-3 242210020**  
 For Dialarc 250 AC/DC. Hand amperage control. Includes 20-foot (6 m) cord with plug.

Note: Adapter no longer available.



**RHC-3GD34A 041122**  
 For Big Blue® 400 CC and 500 CC. Hand amperage or voltage control. Includes 20-foot (6 m) cord with plug.



**PRHC-14 195511**  
 Complete current or voltage control brings 120 volts of GFCI power to work area in a single cord. Housed in a durable and light aluminum case and includes 125-foot (38 m) cord with plugs.

\* For Miller solid-state power sources AFTER serial number JK674521.

\*\* For Miller solid-state power sources BEFORE serial number JK674521.



**Miller Electric Mfg. Co.**  
 An ITW Welding Company  
 1635 West Spencer Street  
 P.O. Box 1079  
 Appleton, WI 54912-1079 USA

**Equipment Sales US and Canada**  
 Phone: 866-931-9730  
 FAX: 800-637-2315  
 International Phone: 920-735-4554  
 International FAX: 920-735-4125

**MillerWelds.com**



## Fingertip Controls



**RCC-14 (14-pin plug)\* 151086**

**RCC-5 (5-pin plug)\*\* 157365**

East/west rotary-motion fingertip current and contactor control attaches to TIG torch using two hook-and-loop fasteners. Great for production or contractors that need quick ramp-up. Includes 26.5-foot (8 m) cord with plug.

**RCC-6M (6-pin plug) 301118**

*Same as above, but for Maxstar® 161 STL, Maxstar 161 STH and Multimatic™ 200.*

Includes 13.25-foot (4 m) cord with plug.



**RCCS-14 (14-pin plug)\* 043688**

**RCCS-5 (5-pin plug)\*\* 043718**

North/south rotary-motion fingertip current and contactor control attaches to TIG torch using two hook-and-loop fasteners. Great for applications that require a finer amperage control. Includes 26.5-foot (8 m) cord with plug.

**RCCS-6M (6-pin plug)**

**195184** 13.25 ft. (4 m) cord

**195503** 26.5 ft. (8 m) cord

*Same as above, but for Maxstar 161 STL, Maxstar 161 STH and Multimatic 200.*

**RCCS-RJ45 301146**

*Same as above, but for Diversion™ 165 and 180.* Includes 13.25-foot (4 m) cord with plug.



**RMLS-14 (14-pin plug)\* 129337**

Momentary- and maintained-contact rocker switch for contactor control. Push forward for maintained contact and backward for momentary contact. Includes 26.5-foot (8 m) cord with plug.



**RMS-14 (14-pin plug)\* 187208**

Momentary-contact switch for contactor control. Rubber-covered pushbutton dome switch ideal for repetitive on-off applications. Includes 26.5-foot (8 m) cord with plug.

**RMS-6M (6-pin plug) 195269**

*Same as above, but for Maxstar 161 STL, Maxstar 161 STH and Multimatic 200.*



**RPBS-14 (14-pin plug)\* 300666**

Attaches to the TIG torch to remotely start and stop the TIG welding process. Includes 25-foot (7.6 m) cord with plug.

## Wireless Remote Controls



**Wireless Remote Foot Control and Receiver 300429**

For remote current and contactor control.

Receiver plugs directly into the 14-pin receptacle of Miller machine. 90-foot (27.4 m) operating range. See literature AY/6.5 for more information.



**Wireless Remote Hand Control and Receiver 300430**

For remote current and contactor control. Receiver plugs directly into the 14-pin

receptacle of Miller machine. 300-foot (91.4 m) operating range. See literature AY/6.6 for more information.

## Extension Cables

### Extension Cables

**242208010** 10 ft. (3 m)

**242208025** 25 ft. (7.6 m)

**242208050** 50 ft. (15.2 m)

**242208080** 80 ft. (24.4 m)

**242208100** 100 ft. (30.5 m)

*For 14-pin remote controls/24 VAC wire feeders. 14-pin plug to a 14-pin socket. (Not for 115-volt XR™ or 50 Series feeders.)*

## Adapter Cords



**14-Pin to 6-Pin Adapter Cord 300507**

*For Maxstar 161 STL, Maxstar 161 STH and Multimatic 200.* 12-inch (305 mm) cord adapts Miller 14-pin foot control or fingertip control to a 6-pin plug.

**14-Pin to 5-Pin Adapter Cord 130003**

18-inch (457 mm) cord adapts Miller 14-pin foot control or fingertip control to a 5-pin plug.

**5-Pin to 14-Pin Adapter Cord 041947**

18-inch (457 mm) cord adapts Miller 5-pin foot control or fingertip control to a 14-pin plug.

**RJ45 to 14-Pin Adapter Cord 300688**

12-inch (305 mm) cord adapts Miller RJ45 foot control or fingertip control to a 14-pin plug.

\* For Miller solid-state power sources AFTER serial number JK674521.

\*\* For Miller solid-state power sources BEFORE serial number JK674521.

Distributed by:

